EVEREST REFRIGERATION

www.EVERESTref.com

Owner's Manual for models:

Back Mount Sandwich Prep. Tables	EPBNR1, EPBNSR2, EPBNR2, EPBNWR2, EPBNR3
Drawered Sandwich Prep. Tables	EPBNR1-D2, EPBNSR2-D2, EPBNR2-D4, EPBNWR2-D4, EPBNR3-D2
Sandwich Prep. Tables (mega-top)	EPBR1, EPBSR2, EPBR2, EPBWR2, EPBR3
Back Mount Open top Prep. Tables	EOTP1, EOTPS2, EOTP2, EOTPW2, EOTP3
Side Mount Sandwich Prep. Tables	EPR1, EPR2, EPWR2, EPR3
Side Mount Pizza Prep. Tables	EPPR1, EPPSR2, EPPR2, EPPR3
Drawered Pizza Prep. Tables	EPPR1-D2, EPPR2-D2, EPPR2-D4, EPPR3-D2, EPPR3-D4

A Step Above the Standard

Thank you for selecting an EVEREST product

ISO-9001

Safety Notices

WARNING - When using your appliance, always follow basic precautions, including the following :

When installing the unit, be careful that the electrical cord is not under the unit or pressed against the wall. This could cause a damage to the cord.

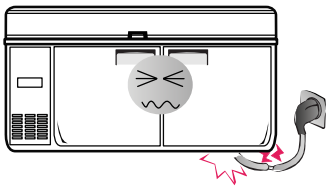

Before starting the unit for the first time, make sure the unit is free from all packaging. Packaging left on the unit during operation may cause a fire hazard.

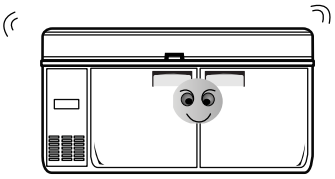

To prevent electrical shock, please do not plug or unplug the cord with wet hands.

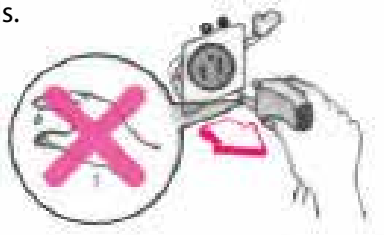

Before cleaning or maintaining the unit, please unplug it. Do not use any flammable cleaning products on or around the unit.

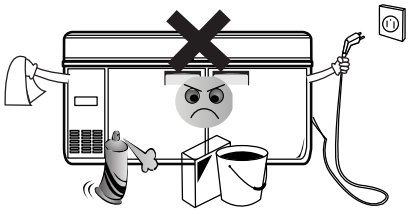

Install the unit on a hard and level surface.

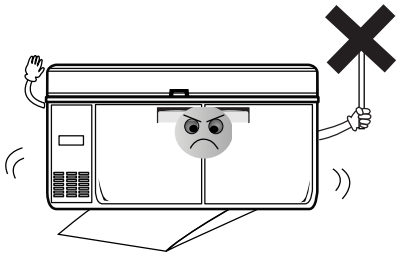

Please do not hang or climb on the unit as this may cause the unit to fall.

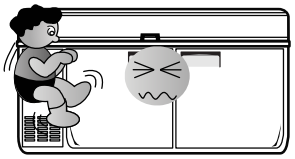

Please do not store temperature sensitive items in the unit, such as medical or science research related materials.

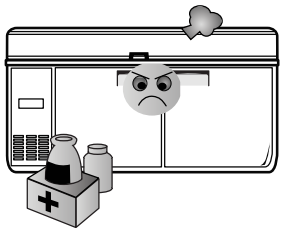

If you suspect a refrigerant leak, unplug the unit and immediately contact an authorized service technician.

WARNING - Read and follow all safety notices in this installation guide. These notices provide helpful safety and efficient operation information. Failure to do so may lead to serious injury and / or damage to the unit.

To minimize shock and fire hazards, be sure not to overload the outlet into which the unit is plugged into. A dedicated circuit of sufficient amperage is required.

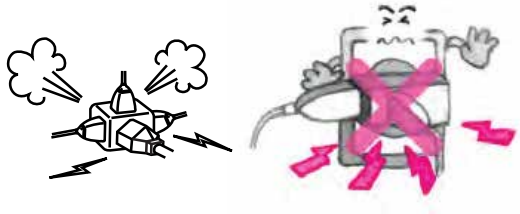

To prevent damage to the electrical components, have the unit plugged in directly to its own circuit. EVEREST is not responsible for any damage caused by improper electrical connections resulting from electrical power failure, use of extension cords & surge protectors, and any voltage drops to the unit.

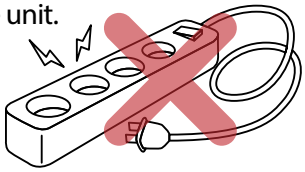

To prevent electrical shock and malfunction, do not spray the unit with water.

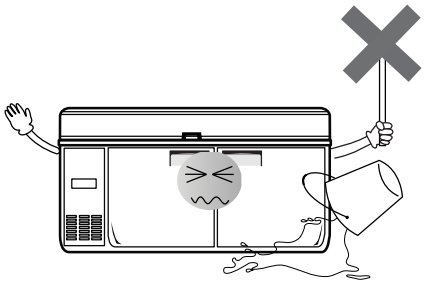

Clean the pronges of the electrical plug with a soft cloth or brush before plugging it into an electrical receptacle to prevent a fire hazard.

When it is time to salvage the unit, make sure to remove the rubber gaskets from the doors to prevent the risk of children or animals getting trapped inside the unit.

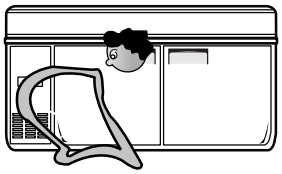

To prevent electrical shock and damage to the electrical cord, please hold the plug head when plugging and unplugging the unit.

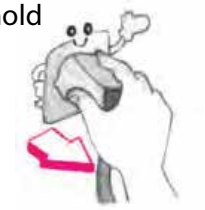

Do not use the electrical cord or plug if they are damaged in any way.

Do not put your hands under the unit when moving it. You could be injured by sharp edges, protruding parts, crushing, etc.

Avoid installing the unit where it could be exposed to water or moisture.

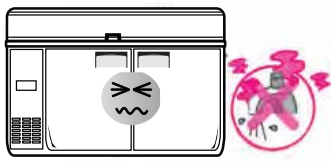

After unplugging the unit, please wait at least 6 minutes before re-plugging it in. Failure to do so could cause extensive damage to the compressor.

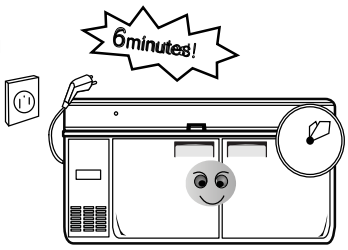

Please do not attempt to remove or repair any components unless you are an authorized service technician.

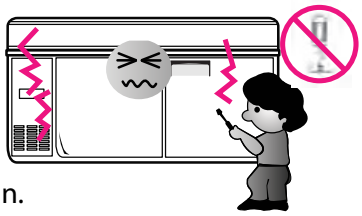

The refrigerator compartment's temperature should be set from 34°F~54°F (See page 9, 10). Setting the temperature out of the recommended ranges will void the unit's warranty.

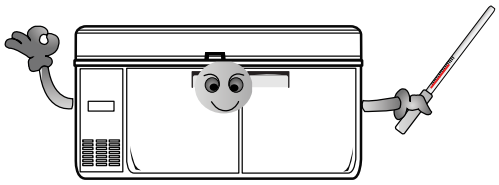

Keep the doors closed properly at all times. Check periodically if the door gaskets seal perfectly. Losing cold air from the cabinet due to old gaskets will lead to a severe damage to the product and increased electrical consumption.

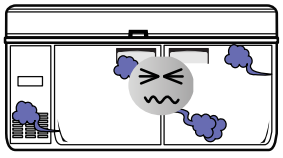

If the unit will not be used for an extended period of time, please unplug it from the outlet.

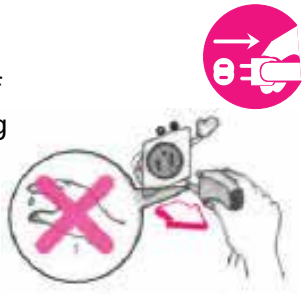

Install the unit on a hard and level surface or the unit could produce undesired noises.

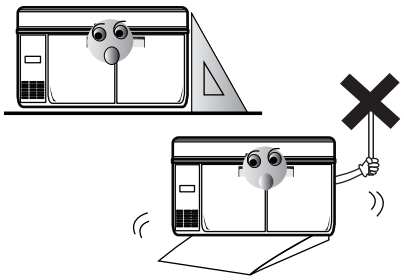

The unit should be positioned at least 7" away from the wall for proper ventiliation. For side mount units, a 7" space should also be afforded to the left side of the unit or wall.

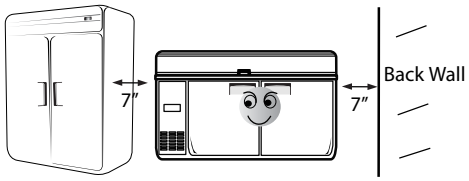

Indoor Use Only

Outdoor use may cause a decrease in performance and significant damage to the unit.

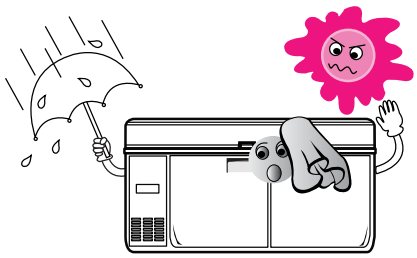

Dusty and High Humidity Areas

Dusty environments will cause the condenser coil to prematurely clog which will require it to be cleaned more often.

High humid environments could cause the unit to rust.

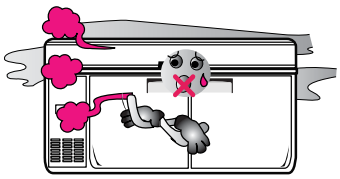

Do not build an enclosure or cabinet around the unit.

Restricting the airflow around the unit's condenser area will cause the compressor to work harder, which can result in compressor failure and the unit not being able to maintain the desired temperature.

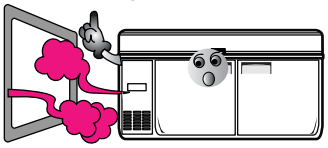

Select a location away from other heat and moisture generating equipment such as stoves, ovens, dish washers, etc.

High ambient temperatures cause the compressor to work harder, which can result in compressor failure and the unit not being able to maintain the desired temperature.

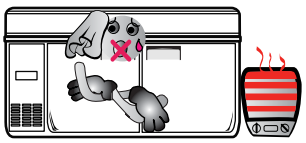

Keep the unit upright at all times during delivery. Tilting the unit during delivery will cause harm to the refrigeration system.

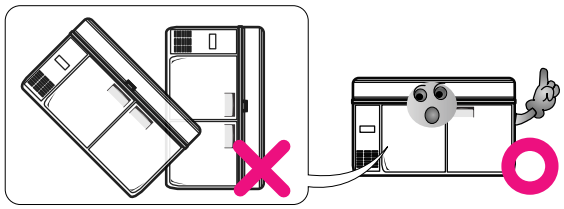

Shelf Cleaning

Periodically remove the shelves from the unit and clean them with mild soap and warm water.

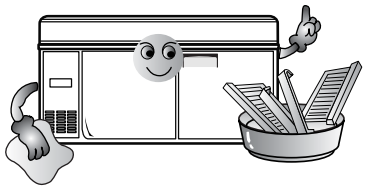

Door Gasket Cleaning

To preserve the life span of the door gasket clean the gasket with mild soap and water on a regular basis.

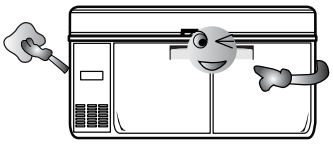

Do not use the following products when cleaning

Clean the exterior of the product with a stainless steel cleaner only. Never use steel wool, strong acids, abrasive cleaners or degreasers. Acidic products and products containing vinegar must be stored in sealed containers to prevent acid damage to the interior of the unit and the evaporator coil. (Rust resulting from the lack of or improper maintenance will not be covered under warranty.)

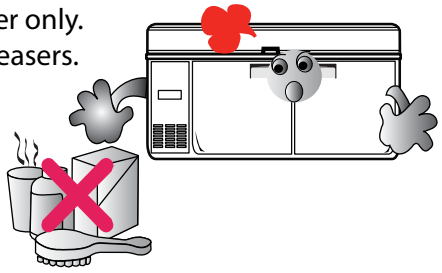

Interior Cleaning

Clean the interior surface of the unit with mild soap and warm water. Do not let water accumulate inside the unit. To prevent water damage, wipe the interior of the unit with a dry cloth as needed. Do not use abrasive cleaners, concentrated detergents, bleaches, cleaning waxes, solvents or polishes to clean the interior of the unit.

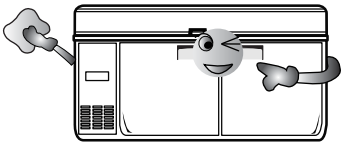

Condenser Coil Cleaning

Poor condensing unit performance is caused by heavy dust build-up on the condenser coil. The condenser coil should be cleaned monthly. Shine a flashlight through the condenser coil to check for dirt between the fins. Clean the outside of the condenser with a soft brush or a vacuum with a brush attachment. The condenser coil should be cleaned in the direction of the fins, top to bottom, not side to side. Be careful not to bend the fins. Detailed instructions of this procedure can be found on page 15 in this manual.

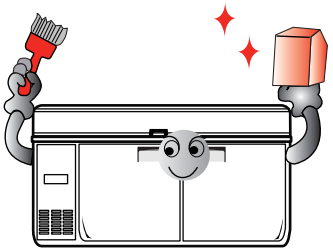

BEFORE YOU CALL
Please check the following before requesting service

	Symptom	Possible Solutions
	Condensing unit fails to start	a. Ensure the electrical cord has not been disconnected. b. Ensure the unit is turned on.
	Cabinet does not maintain proper temperature	a. Check the door gaskets for proper seal. b. Check to see if the temp. control setting is too high, then adjust as necessary. c. Avoid installing the unit next to heat generating equipment and direct sunlight. d. Avoid storing hot contents. e. Make sure the doors are fully closed. f. Ensure all pans are installed.
	Refrigerated compartment is too cold	a. Adjust the temperature control to a warmer setting.
	Noisy operation	a. Check for loose parts. b. Check for tubing rattle. c. Check for a bent fan blade. d. Check for damaged fan motor bearings. e. Ensure the unit is stable. f. Ensure the cabinet is level.
	Condensation on the exterior surface	a. Condensation on the exterior surface of the unit is perfectly normal during periods of high humidity. b. Check door alignment and gaskets for proper seal.
	Sound of water dripping	a. This is the sound of the refrigerant circulating during the compressor rest period and it is normal.
	Exterior walls are warm	a. Heaters have been placed around the door openings to prevent condensation buildup. This is normal.
	Condensation on the interior	a. Condensation can occur during hot and humid weather with frequent or prolonged door opening. This is normal. b. The doors might not be closed properly. Check door alignment and gaskets for proper seal.

Shelves

The unit's shelves are adjustable so that the refrigerated compartment can be configured to suite your needs.

The shelf clip pilasters are spaced and labeled in 1" increments for your convenience.

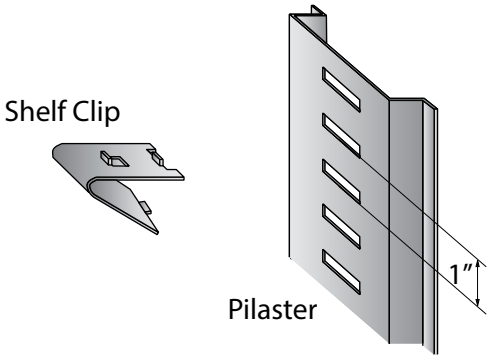

To install a shelf, hook the shelf clips into the pilasters by inserting the top part of the clips first and then the bottom. Each shelf requires 4 clips.

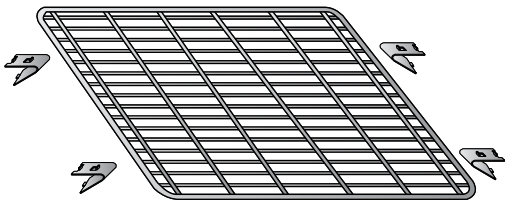

To remove a shelf, start by unloading the shelf. Second, remove the shelf itself. Finally, remove the shelf clips by tilting them up and allowing the bottom of the clip to come out first and then remove the top part of the clip from the pilaster.

Warning - Never attempt to adjust a shelf when loaded!

Specifications

Model	Back Mount Sandwich Prep Tables					Back Mount Mega-Top	
	EPBNR1	EPBNSR2	EPBNR2	EPBNWR2	EPBNR3	EPBR1	EPBSR2
Capacity(Cu. Ft.)	6.5	8.5	11.8	15	18.3	6.5	8.5
Door(s)	1	2	2	2	3	1	2
Shelves	1	2	2	2	3	1	2
Pans	1/6 x 6	1/6 x 8	1/6 x 12	1/6 x 12 1/4 x 2	1/6 x18	1/6 x 9	1/6 x 12
Compressor (HP)	1/6	1/6	1/4	1/3	1/3	1/6	1/6
Power (V-Hz-Ph)	115-60-1	115 -60-1	115-60-1	115-60-1	115-60-1	115-60-1	115-60-1
Temp. Range (°F)	32 ~ 42	32~ 42	32 ~ 42	32 ~ 42	32 ~ 42	32 ~ 42	32 ~ 42
Refrigerant	R-134A	R-134A	R-134A	R-134A	R-134A	R-134A	R-134A
Crated Weight (LBS)	216	258	319	373	438	220	262
Amps (A)	4.10	5.20	5.20	3.98	4.11	4.50	5.20
Ext. Dimensions (W x D x H* inches)	27 1/2 x 31 1/2 x 38 1/4	35 1/2 x 31 1/2 x 38 1/4	47 1/2 x 31 1/2 x 38 1/4	59 1/2 x 31 1/2 x 38 1/4	71 x 31 1/2 x 38 1/4	27 1/2 x 35† x 38 1/4	35 1/2 x 35† x 38 1/4

Model	Back Mount Mega-Top			Back Mount Open Top Prep Tables				
	EPBR2	EPBWR2	EPBR3	EOTP1	EOTPS2	EOTP2	EOTPW2	EOTP3
Capacity(Cu. Ft.)	11.8	15	18.3	6.5	8.5	11.8	15	18.3
Door(s)	2	2	3	1	2	2	2	3
Shelves	2	2	3	1	2	2	2	3
Pans	1/6 x 18	1/6 x 24	1/6 x 30	1/6 x 9	1/6 x 12	1/6 x 18	1/6 x 24	1/6 x 30
Compressor (HP)	1/4	1/3	1/3	1/6	1/6	1/4	1/3	1/3
Power (V-Hz-Ph)	115-60-1	115-60-1	115-60-1	115-60-1	115 -60-1	115-60-1	115-60-1	115-60-1
Temp. Range (°F)	32 ~ 42	32 ~ 42	32 ~ 42	32 ~ 42	32~ 42	32 ~ 42	32 ~ 42	32 ~ 42
Refrigerant	R-134A	R-134A	R-134A	R-134A	R-134A	R-134A	R-134A	R-134A
Crated Weight (LBS)	325	381	445	203	247	302	354	407
Amps (A)	5.20	3.98	4.11	4.50	5.20	5.20	3.98	4.11
Ext. Dimensions (W x D x H* inches)	47 1/2 x 35† x 38 1/4	59 1/2 x 35† x 38 1/4	71 x 35† x 38 1/4	27 1/2 x 31 1/2 x 32 1/4	35 1/2 x 31 1/2 x 32 1/4	47 1/2 x 31 1/2 x 32 1/4	59 1/2 x 31 1/2 x 32 1/4	71 x 31 1/2 x 32 1/4

Model	Drawered Sandwich Prep Tables				
	EPBNR1-D2	EPBNSR2-D2	EPBNR2-D4	EPBNWR2-D4	EPBNR3-D2
Capacity(Cu. Ft.)	6.5	8.5	11.8	15	18.3
Doors & Drawers	2(DR)	2(DR)	4(DR)	4(DR)	1(D) 2(DR)
Shelves	-	-	-	-	1
Pans	1/6 x 6	1/6 x 8	1/6 x 12	1/6 x 12 1/4 x 2	1/6 x 18
Compressor (HP)	1/6	1/6	1/4	1/3	1/3
Power (V-Hz-Ph)	115-60-1	115 -60-1	115-60-1	115-60-1	115-60-1
Temp. Range (°F)	32 ~ 42	32~ 42	32 ~ 42	32 ~ 42	32 ~ 42
Refrigerant	R-134A	R-134A	R-134A	R-134A	R-134A
Crated Weight (LBS)	242	282	364	421	466
Amps (A)	4.10	5.20	5.20	3.98	4.11
Ext. Dimensions (W x D x H* inches)	27 1/2 x 31 1/2 x 38 1/4	35 1/2 x 31 1/2 x 38 1/4	47 1/2 x 31 1/2 x 38 1/4	59 1/2 x 31 1/2 x 38 1/4	71 x 31 1/2 x 38 1/4

* Ext. height does not include 5" for casters.

† Ext. depth includes 9 1/8" cutting board.

Drawer pans are not include for Drawered Sandwich Prep Tables.

Specifications subject to change without notice.

Specifications

Model	Side Mount Sandwich Prep Tables			
	EPR1	EPR2	EPWR2	EPR3
Capacity(Cu. Ft.)	9	13	15	23
Doors & Drawers	1	2	2	3
Shelves	2	4	4	6
Pans	1/6 x 8	1/6 x 12	1/4 x 10	1/4 x 12
Compressor (HP)	1/4	1/4	1/4	1/3
Power (V-Hz-Ph)	115-60-1	115 -60-1	115-60-1	115-60-1
Temp. Range (°F)	32 ~ 42	32~ 42	32 ~ 42	32 ~ 42
Refrigerant	R-134A	R-134A	R-134A	R-134A
Crated Weight (LBS)	267	340	363	434
Amps (A)	3.52	4.37	4.37	5.24
Ext. Dimensions (W x D x H* inches)	35 1/2 x 31 1/2 x 38	47 1/2 x 31 1/2 x 38	59 1/2 x 31 1/2 x 38	71 x 31 1/2 x 38

Model	Pizza Prep Tables			
	EPPR1	EPPSR2	EPPR2	EPPR3
Capacity(Cu. Ft.)	9	15	23	30
Doors	1	2	2	3
Shelves	2	4	4	6
Pans	1/3 x 4	1/3 x 7	1/3 x 9	1/3 x 12
Compressor (HP)	1/4	1/4	1/3	1/3+
Power (V-Hz-Ph)	115-60-1	115-60-1	115-60-1	115-60-1
Temp. Range (°F)	32 ~ 42	32 ~ 42	32 ~ 42	32 ~ 42
Refrigerant	R-134A	R-134A	R-134A	R-134A
Crated Weight (LBS)	290	394	445	619
Amps (A)	3.97	6.30	6.30	6.33
Ext. Dimensions (W x D† x H* inches)	35 1/2 x 36 1/2 x 36 3/4	59 1/2 x 36 1/2 x 36 3/4	71 x 36 1/2 x 36 3/4	93 1/4 x 36 1/2 x 36 3/4

Model	Drawered Pizza Prep Tables				
	EPPR1-D2	EPPR2-D2	EPPR2-D4	EPPR3-D2	EPPR3-D4
Capacity(Cu. Ft.)	9	23	23	30	30
Doors & Drawers	2(D)	1(D) 2(DR)	4(DR)	2(D) 2(DR)	1(D) 4(DR)
Shelves	-	2	-	4	2
Pans	1/3 x 4	1/3 x 9	1/3 x 9	1/3 x 12	1/3 x 12
Compressor (HP)	1/4	1/3	1/3	1/3+	1/3+
Power (V-Hz-Ph)	115-60-1	115-60-1	115-60-1	115-60-1	115-60-1
Temp. Range (°F)	32 ~ 42	32 ~ 42	32 ~ 42	32 ~ 42	32 ~ 42
Refrigerant	R-134A	R-134A	R-134A	R-134A	R-134A
Crated Weight (LBS)	309	487	488	610	649
Amps (A)	3.97	6.30	6.30	6.33	6.33
Ext. Dimensions (W x D† x H* inches)	35 1/2 x 36 1/2 x 36 3/4	71 x 36 1/2 x 36 3/4	71 x 36 1/2 x 36 3/4	93 1/4 x 36 1/2 x 36 3/4	93 1/4 x 36 1/2 x 36 3/4

[NOTE]
* Exterior height does not include 5" for casters.
† Exterior depth includes 19 1/4" cutting board.
Drawer pans are not include for Drawered Pizza Prep Tables.

Specifications subject to change without notice.

[Analog Temperature Knob Setting]

Applicable models: EPBNR1, EPBNSR2, EPBNR2, EPBNWR2, EPBNR3,
EPBNR1-D2, EPBNSR2-D2, EPBNR2-D4, EPBNWR2-D4, EPBNR3-D2,
EPBR1, EPBSR2, EPBR2, EPBWR2, EPBR3,
EOTP1, EOTPS2, EOTP2, EOTPW2, EOTP3

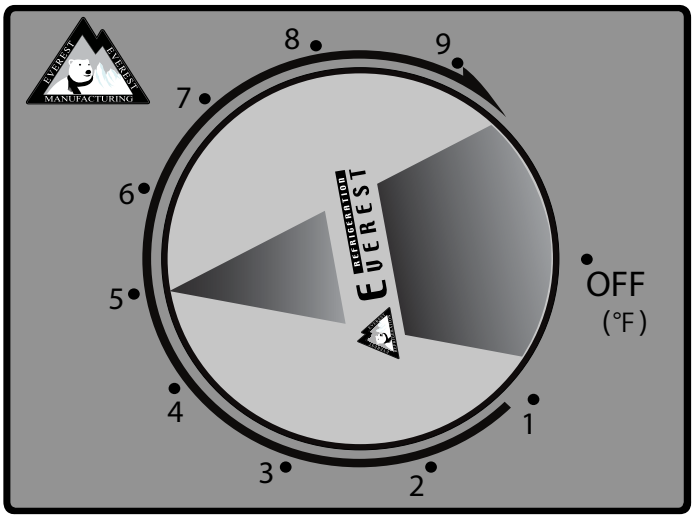

[Temperature Setting Range]

Setting Range	Comp.	REF (°F)
1 ~ 3	On	48
	Off	41
3 ~ 5	On	39
	Off	31
6 ~ 9	On	30
	Off	21

* Factory Recommended Setting: “5”

[Digital Temperature Setting]

Applicable models: EPR1, EPR2, EPWR2, EPR3,
EPPR1, EPPSR2, EPPR2, EPPR3,
EPPR1-D2, EPPR2-D2, EPPR2-D4, EPPR3-D2, EPPR3-D4

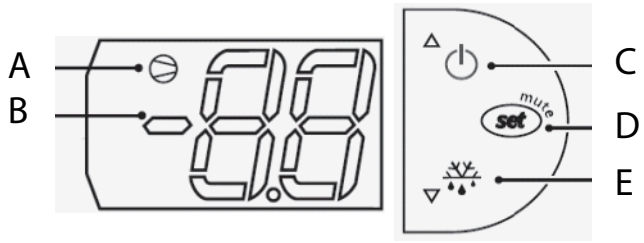

* LED Display

A Operation of compressor
B Current cabinet temperature

* Control Buttons

C Power button

D Temperature setting button

E Defrost button

* How to set desired temperature

Step 1 Press and hold " **D** " button until the LED displays " **set** " symbol and a number consecutively. The number is the previous setting temperature (recommended setting is 35°F). When the number is flashing, release the button.

Caution: If " **PS** " symbol appears on the LED, it means that you pressed and held " **D** " button too long. Release it, and then press " **D** " button twice to restart the temperature setting.

Step 2 While flashing the number, set your desired temperature by pressing " **C** " (high) or " **E** " (low) button. The number increases or decreases by a decimal point.

Note: Your new setting temperature should be in the range of between 32°F and 42°F.

Step 3 Press " **D** " button to get out of the setting mode. The LED will show the current cabinet temperature.

Back Mount Sandwich Preparation Tables

EPBNR1 / EPBNR1-D2

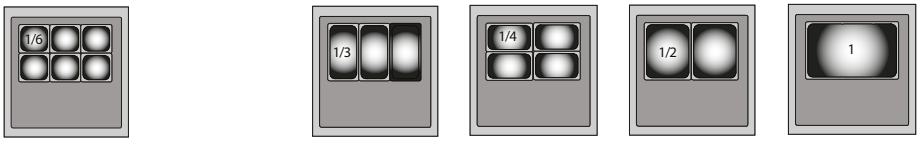

[Standard: (6) 1/6 size pans w/ 2 pan dividers]

EPBNSR2 / EPBNSR2-D2

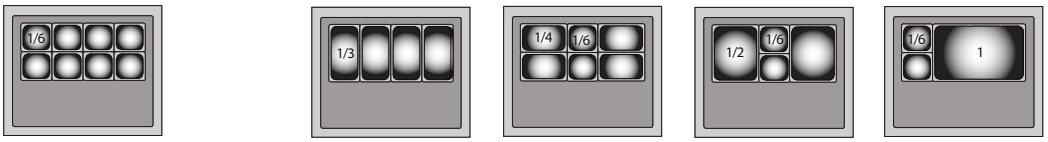

[Standard: (8) 1/6 size pans w/ 3 pan dividers]

EPBNR2 / EPBNR2-D4

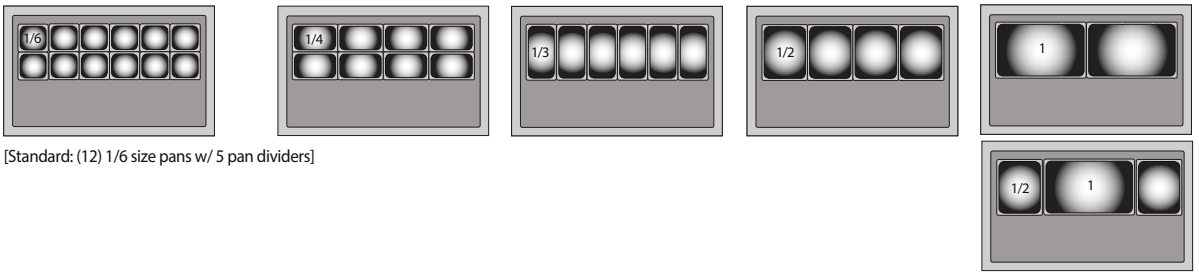

[Standard: (12) 1/6 size pans w/ 5 pan dividers]

EPBNWR2 / EPBNWR2-D4

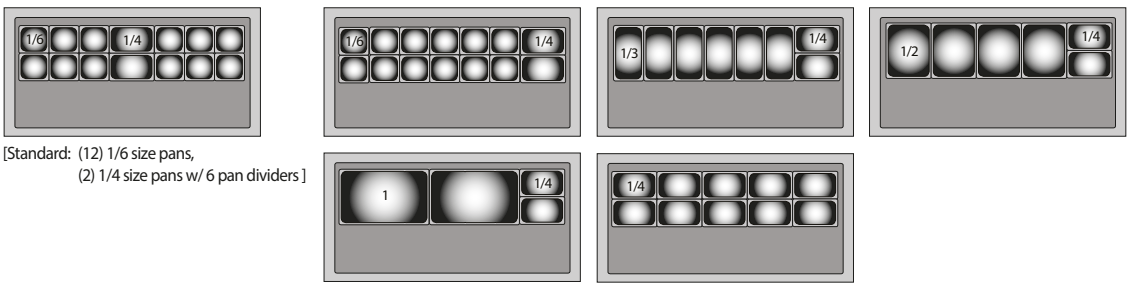

[Standard: (12) 1/6 size pans,
(2) 1/4 size pans w/ 6 pan dividers]

EPBNR3 / EPBNR3-D2

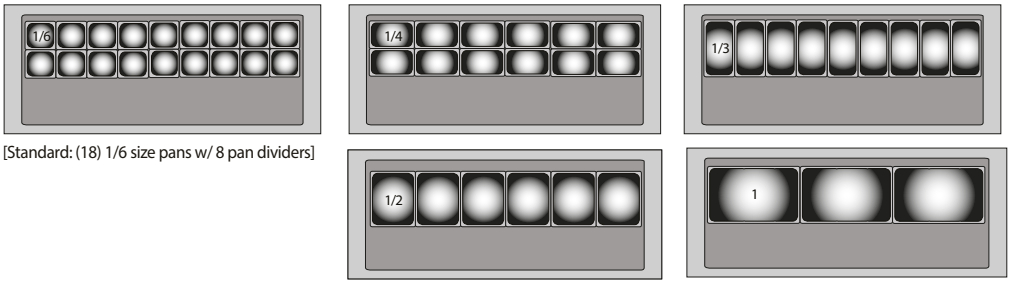

[Standard: (18) 1/6 size pans w/ 8 pan dividers]

Back Mount Mega-Top Sandwich Prep. Table, Open Top Prep. Table

EPBR1 / EOTP1

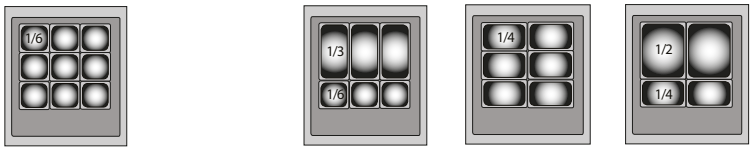

[Standard: (9) 1/6 size pans w/ 2 pan dividers]

EPBSR2 / EOTPS2

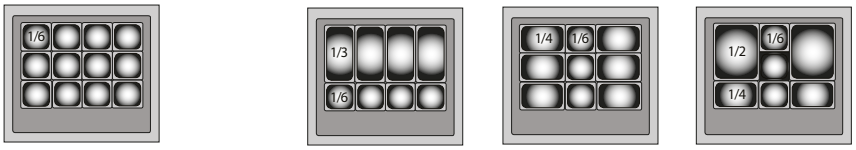

[Standard: (12) 1/6 size pans w/ 3 pan dividers]

EPBR2 / EOTP2

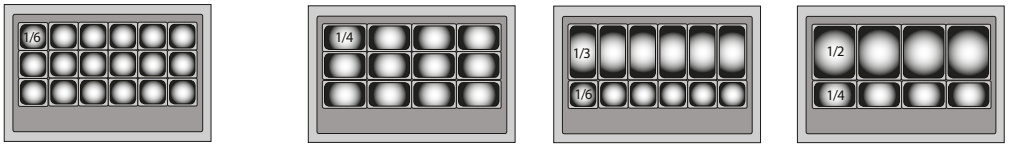

[Standard: (18) 1/6 size pans w/ 5 pan dividers]

EPBWR2 / EOTPW2

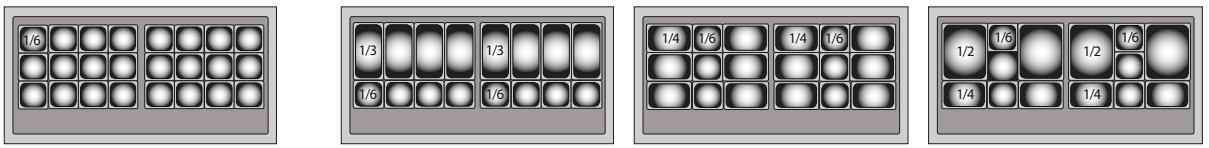

[Standard: (24) 1/6 size pans w/ 7 pan dividers]

EPBR3 / EOTP3

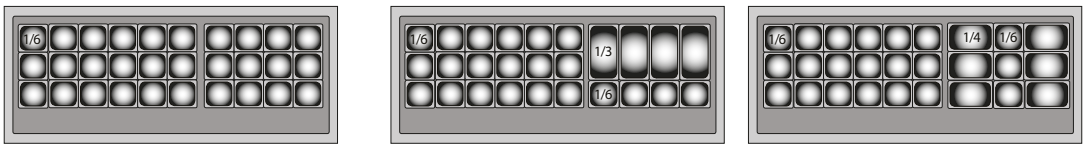

[Standard: (30) 1/6 size pans w/ 9 pan dividers]

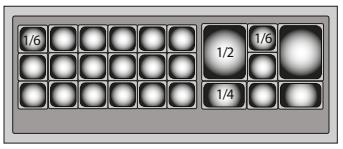

Side Mount Sandwich Preparation Tables

EPR1

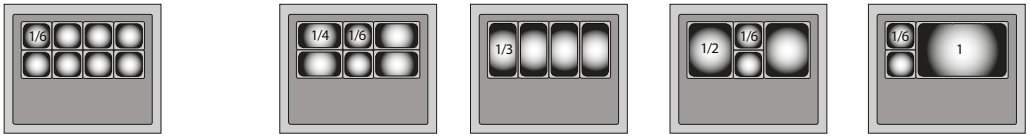

[Standard: (8) 1/6 size pans w/ 3 pan dividers]

EPR2

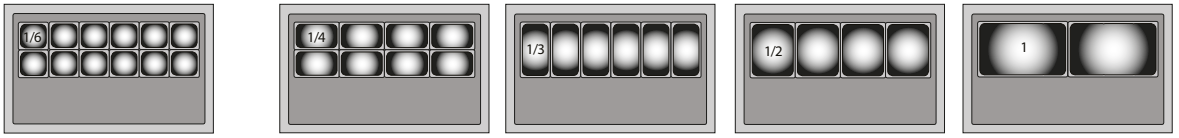

[Standard: (12) 1/6 size pans w/ 5 pan dividers]

EPWR2

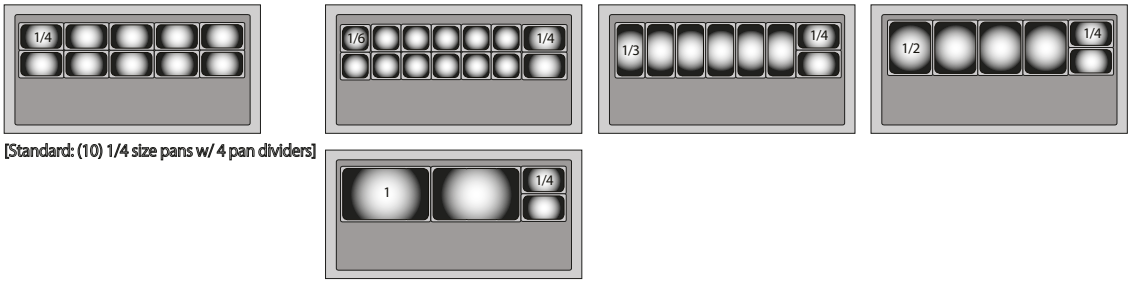

[Standard: (10) 1/4 size pans w/ 4 pan dividers]

EPR3

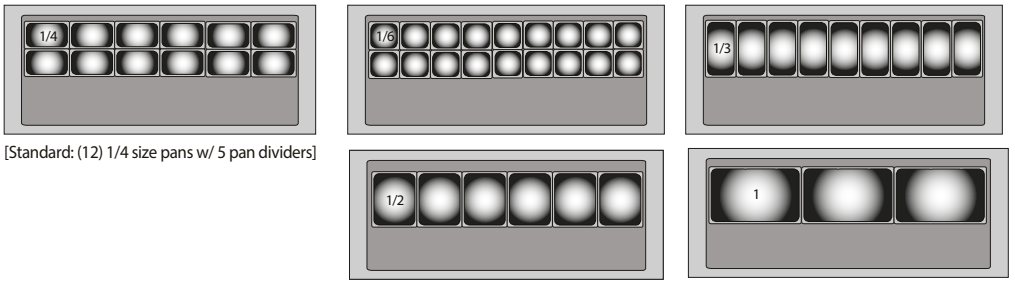

[Standard: (12) 1/4 size pans w/ 5 pan dividers]

Pizza Preparation Tables

EPPR1 / EPPR1-D2

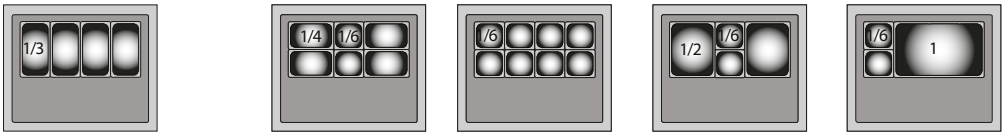

[Standard: (4) 1/3 size pans w/ 3 pan dividers]

EPPSR2

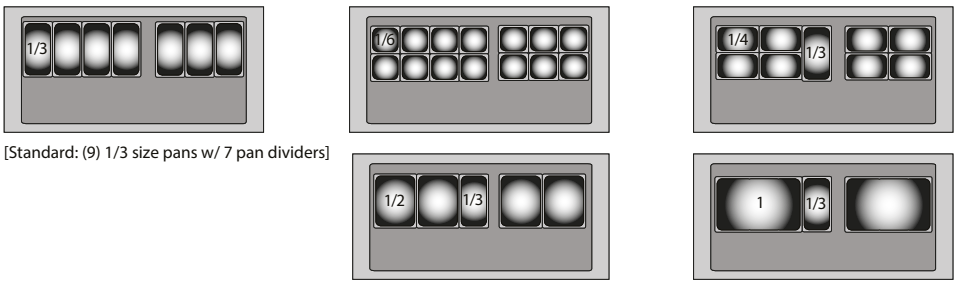

[Standard: (9) 1/3 size pans w/ 7 pan dividers]

EPPR2 / EPPR2-D2 / EPPR2-D4

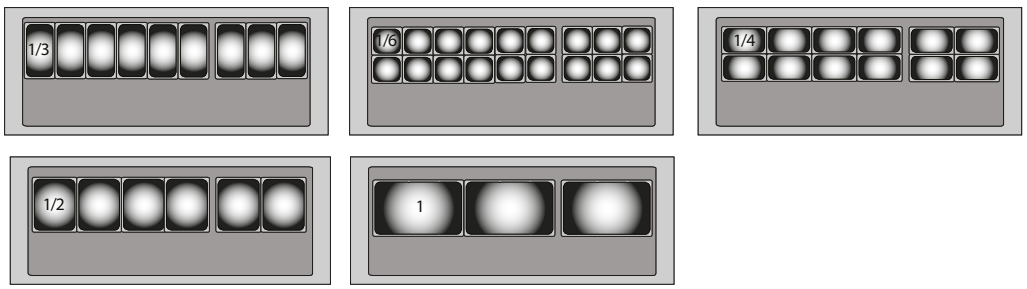

[Standard: (12) 1/3 size pans w/ 9 pan dividers]

EPPR3 / EPPR3-D2 / EPPR3-D4

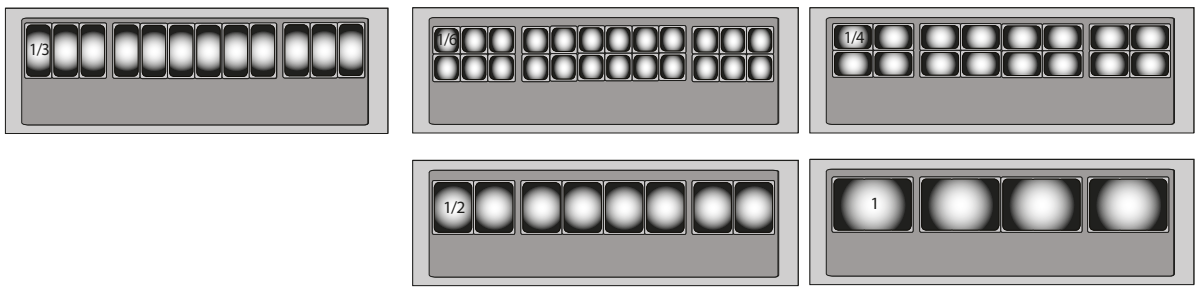

Back Mount Sandwich Prep. Tables

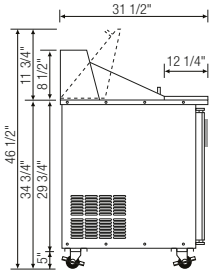

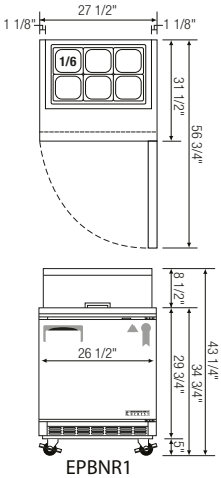

EPBNR1

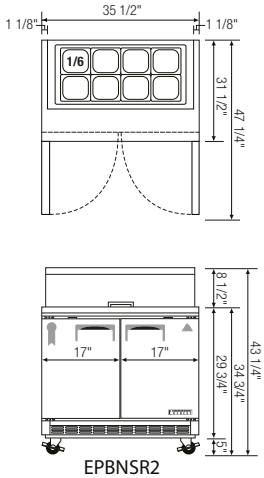

EPBNSR2

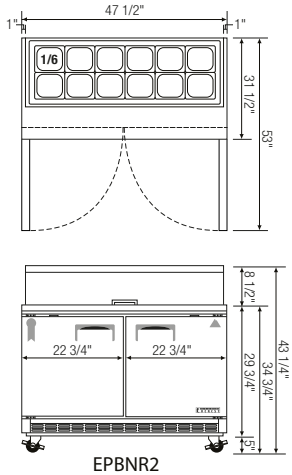

EPBNR2

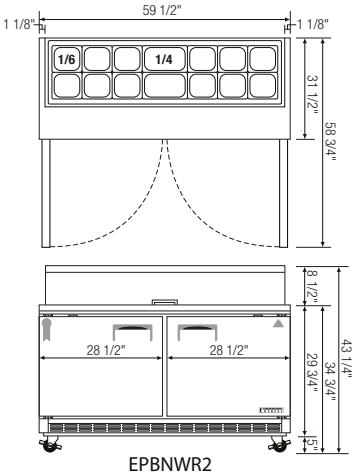

EPBNWR2

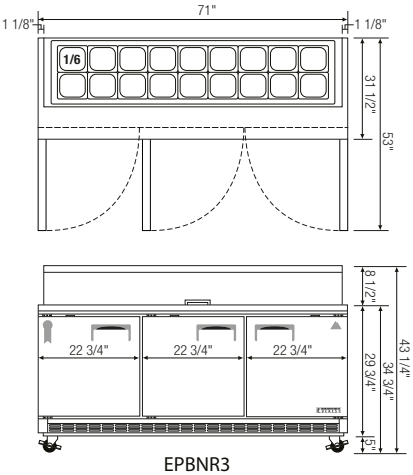

EPBNR3

Drawered Sandwich Prep. Tables

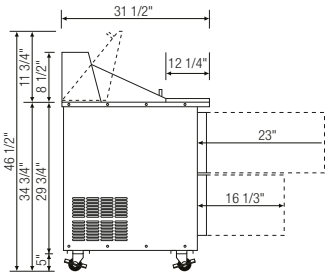

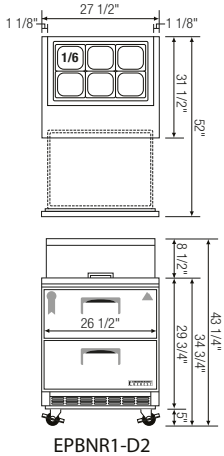

EPBNR1-D2

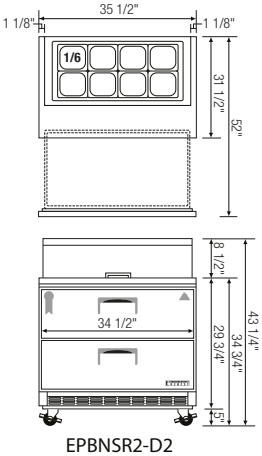

EPBNSR2-D2

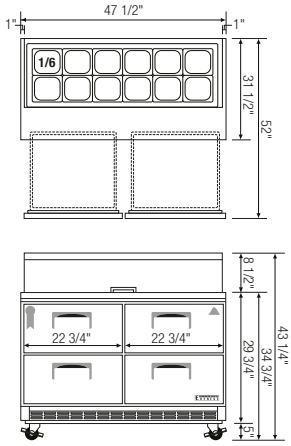

EPBNR2-D4

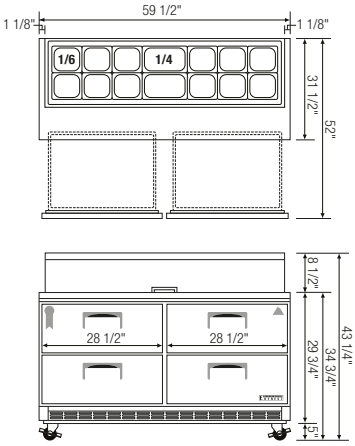

EPBNWR2-D4

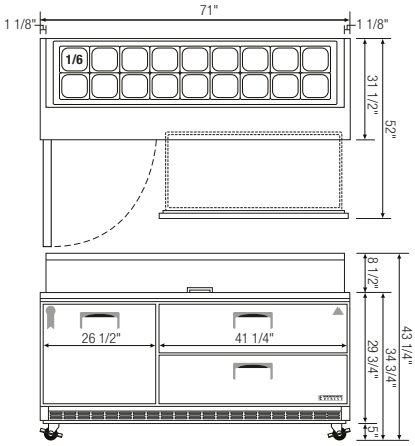

EPBNR3-D2

Back Mount Mega-Top Sandwich Prep. Tables

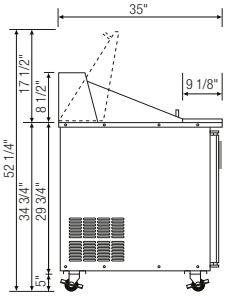

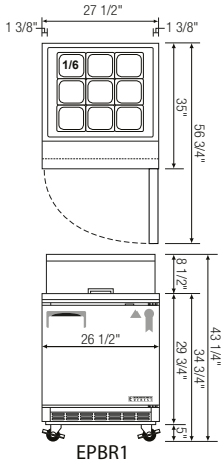

EPBR1

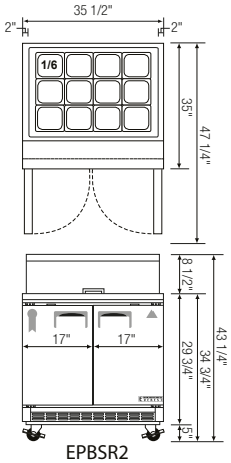

EPBSR2

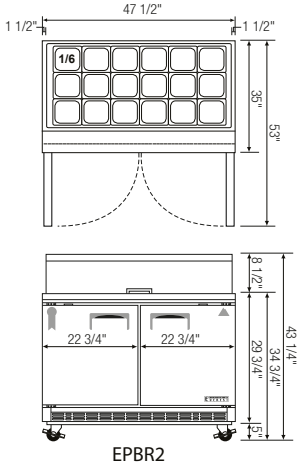

EPBR2

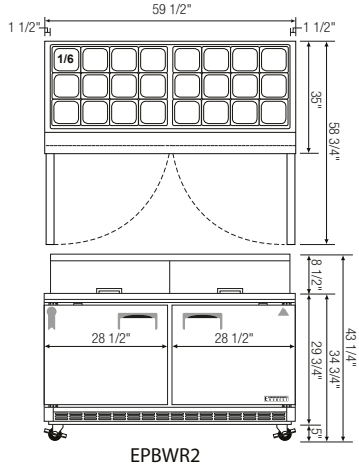

EPBWR2

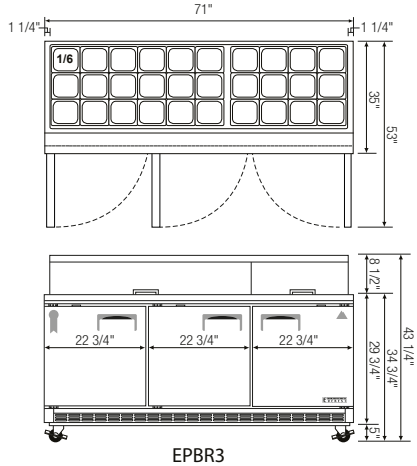

EPBR3

Back Mount Open Top Prep. Tables

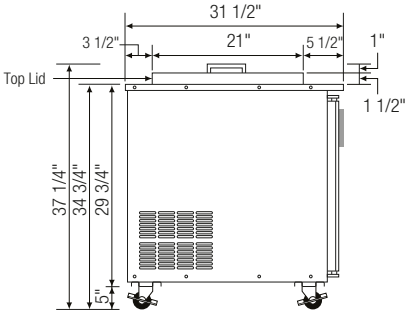

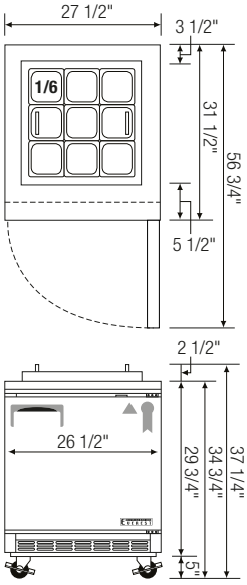

▲ **E0TP1**

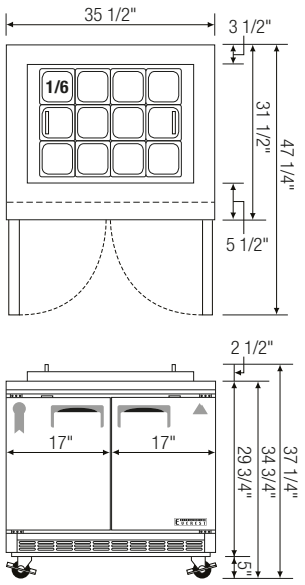

▲ **E0TPS2**

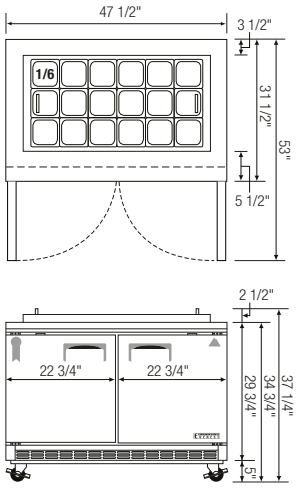

▲ **E0TP2**

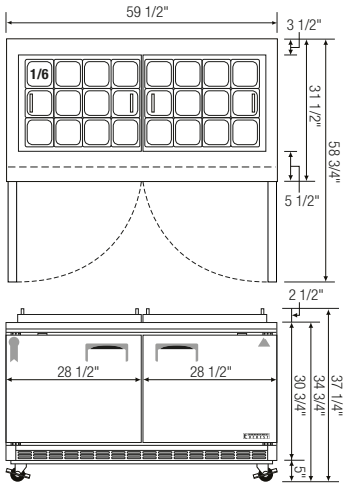

▲ **E0TPW2**

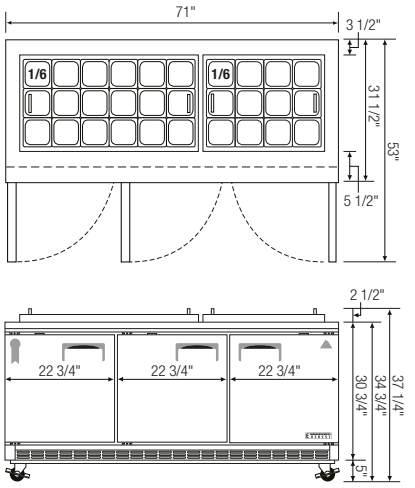

▲ **E0TP3**

Side Mount Sandwich Prep. Tables

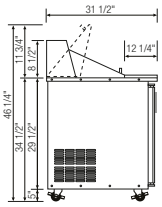

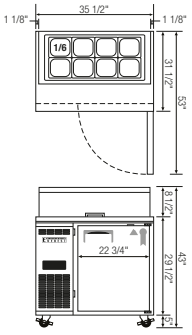

EPR1

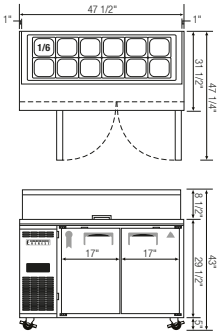

EPR2

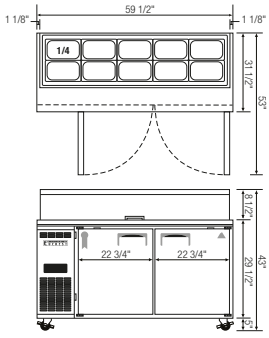

EPWR2

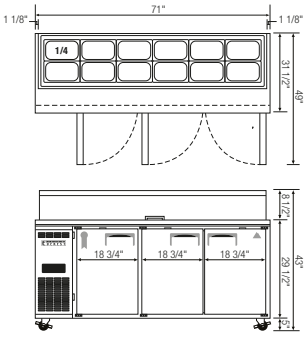

EPR3

Pizza Prep. Tables

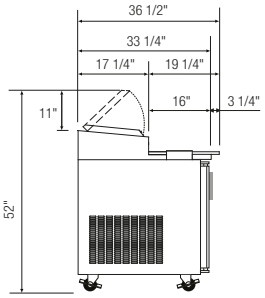

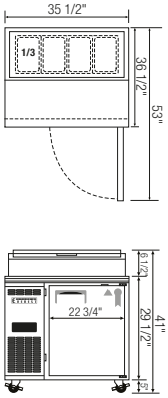

EPPR1

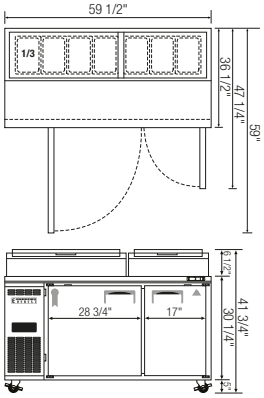

EPPSR2

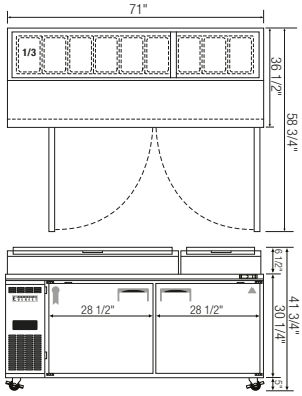

EPPR2

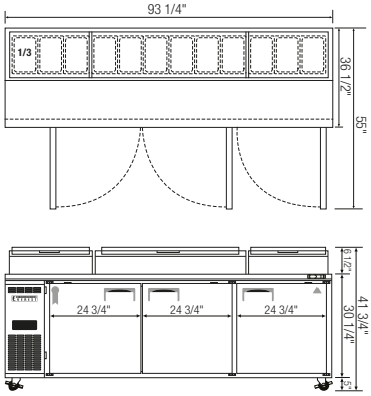

EPPR3

Drawered Pizza Prep. Tables

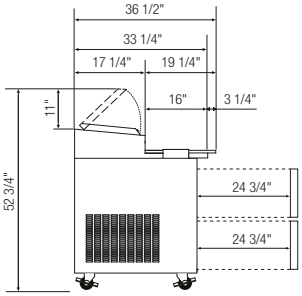

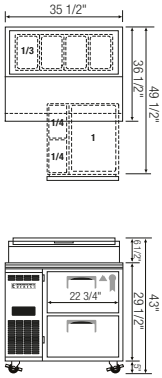

EPPR1-D2

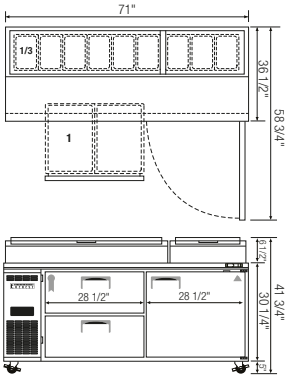

EPPR2-D2

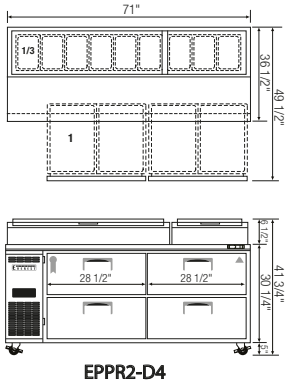

EPPR2-D4

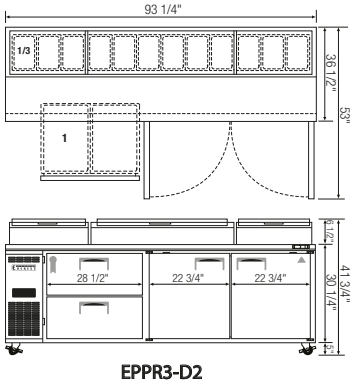

EPPR3-D2

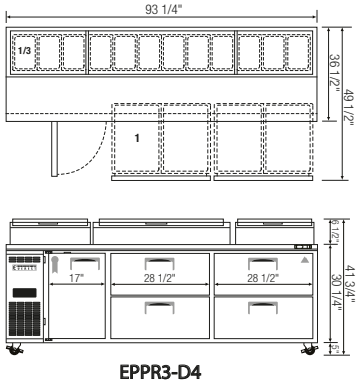

EPPR3-D4

CONDENSER COIL MAINTENANCE

Failure to maintain a clean condenser coil will eventually result in compressor failure and product loss.
Mechanical failures due to a lack of or improper maintenance are not covered under warranty.
Keeping the condenser coil clean will maximize energy savings. Cleaning of the condenser coil is part of regular maintenance and is not covered under warranty.

CONDENSER COIL CLEANING PROCEDURE

Please use the following steps to clean the condenser coil. If you have any questions regarding this procedure, please call the Everest customer service department at (800) 444-6285.

1. Open the front left side panel (when facing the unit).
2. Remove the air filter by pulling it up, then away from the unit.
3. Clean the condenser coil filter by wiping it with a damp cloth.
4. In some instances, the condenser coil itself may require professional cleaning due to a buildup of grease and dust. In this case, contact a local refrigeration company to take care of this for you.
5. Install the condenser coil filter back onto the unit.
6. Close the front left side panel.

The warranty card below must be submitted to Everest within thirty (30) days of purchase.

WARRANTY REGISTRATION CARD

Business Name : _____ Telephone : ( ) _____

Address : _____

City : _____ State : _____ Zip : _____

Place of Purchase : _____ Date Purchased : _____ Date Installed : _____

Model No : _____ Cabinet Serial No : _____

3 YEAR PARTS and LABOR WARRANTY

(Applicable to units purchased after July 1, 2014.)

5 YEAR COMPRESSOR WARRANTY

Name of Business Owner : _____ Date : _____

Signature of Business Owner : _____

EVEREST LIMITED WARRANTY

EVEREST warrants to the original purchaser of every new EVEREST unit, the cabinet and all parts thereof, to be free from defects in material or workmanship, under normal and proper use and maintenance service as specified by EVEREST and upon proper installation and start-up in accordance with the instruction packet supplied with each unit. Our obligation under this warranty is limited to a period of three (3) years from the date of original installation or thirty six (36) months after shipment date from EVEREST, which ever occurs first. This is applicable to units purchased after July 1, 2014. Any part covered under this warranty that is determined by EVEREST to have been defective within three (3) years of original installation or thirty six (36) months after shipment date from the manufacturer, which ever occurs first, is limited to the repair or replacement, including labor charges, of defective parts or assemblies. The labor warranty shall include standard straight time labor charges only and reasonable travel time, as determined by EVEREST.

WARRANTY CLAIMS

All warranty claims for labor or parts must be made directly through EVEREST. All claims shall include: unit model number, cabinet serial number, proof of new product purchase, installation date, and all pertinent information related to the alleged defect. For compressor warranty claims, the compressor tag shall be returned to EVEREST with the above listed information.

WARRANTY EXCLUSIONS

EVEREST's sole obligation under this warranty is limited to either the repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty.

A. NON WARRANTY PARTS
EVEREST excludes specific parts exposed to normal wear and tear. These parts include, but are not limited to, lamps, gaskets, casters, shelves and shelf clips, pans, bin and pan dividers and airflow guards.

B. INDIRECT OR CONSEQUENTIAL DAMAGE
EVEREST does not warrant economic loss, profit loss, or special, indirect or consequential damages including without limitation, losses or damages arising from food or product spoilage claims caused by refrigeration failure.

C. IMPROPER USAGE
EVEREST is not responsible for parts or labor coverage for component failure and or other damages resulting from improper usage, installation or failure to clean and/or maintain product as set forth in the user's manual provided with this unit. All EVEREST products are designed for commercial usage, not for residential use. Therefore, the warranty will not be honored if product is installed in a residential house.

D. WARRANTY IS NOT TRANSFERABLE
Warranty is limited to only the original purchaser/user to whom delivered. It is not transferable.

E. ALTERATION, NEGLECT, MISUSE, ABUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD.
EVEREST is not responsible for malfunctions due to alteration, neglect, misuse, abuse, accident, damage during transit or installation, fire, flood, storm, and/or other acts of God. And EVEREST is not responsible for any improper electrical connections resulting from electrical power failure, the use of extension cords, and low voltage or voltage drops to the unit.

F. UNAUTHORIZED MODIFICATION
EVEREST is not responsible for the repair or replacement of failed or damaged components resulting from unauthorized modifications to units or the use of non-standard parts without prior written approval from EVEREST.

G. RESIDENTIAL, NON-COMMERCIAL USE
This warranty does not apply to a unit installed in a residential setting. This unit is for commercial use only.

H. OUTSIDE THE U.S.
This warranty does not apply to any parts and/or labor warranty claims made on units sold or used outside of the United States.

ADDITIONAL TWO(2) YEAR COMPRESSOR WARRANTY

In addition to the warranty set forth above, EVEREST warrants the hermetically sealed compressor for an additional two (2) years, not to exceed sixty (60) months from the date of shipment from EVEREST, provided upon receipt of the compressor, manufacturer examination shows the sealed compressor to be defective. This compressor warranty does not apply to shipping or labor costs or any other parts of the unit whether electrical or mechanical.

These warranties are exclusive and in lieu of all other warranties, expressed or implied, and all other obligations or liabilities on our part, and we neither assume nor authorize any other person to assume for us any other obligation or liability in connection with the sale of said refrigeration units or any part thereof.

REFRIGERATION
EVEREST

A Step Above the Standa rd

201 W. Artesia Blvd., Compton CA 90220
Tel : 310-323-6586, 800-444-6285
Fax : 310-323-7524, 310-761-1127

Visit our website at www.EVERESTref.com